

Навигационные лидары AS-100C

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47


эл.почта: auh@nt-rt.ru || сайт: <https://akusense.nt-rt.ru>

LiDAR Scanner

Navigation Type




Basic Features	Working principle		TOF	
	Optical working principle		Diffuse Reflection	
	Light source		Infrared laser (905nm)	
	Laser spot exit aperture		10mm	
	Scanning angle		360°	
	Scanning angle resolution		0.05°/0.1°	
	Measuring range		0.2m ~100m	
	Measurement Error	System error (typical)	Distance measurement: 25mm(1m~20m) / 40mm(20m~50m); RSSI Measurement: 2%(1m~20m) / 4%(20m~50m)	
		Statistical Error(1σ)	Distance measurement: 10mm(1m~20m) / 20mm(20m~50m); RSSI Measurement: 1%(1m~20m) / 2%(20m~50m)	
	Indicator		Quantity: 4; Definition: PWR: Power indicator; LNK: Ethernet indicator; ERR: Operating fault indicator; HTR: Normal measurement indicator	
Electrical data	Operating voltage		9V~30V DC	
	Power consumption		5W@DC 24V	
	Communication		Ethernet: Rate: 10/100Mbps; Functions: device configuration/measurement data output	
Environmental conditions	Operating temperature		-10°C~+50°C	
	Storage temperature		-30°C~+70°C	
	Operating humidity		93%,+40°C,2h(GB/T2423.3)	
	Ambient Illumination		≤80,000Lux	
	Vibration resistance		GB/T 2423.10	
	Enclosure rating		IP65(GB4208~2008)	
Mechanical data	Connection		Connector	
	Dimension		110x96.5x71.5mm	
	Material		Aluminum Alloy	
	Weight		0.7kg	
	Accessories		Power cables, RJ45 network cables, I/O cables, mounting screws, spacers and easy installation tools, vibration isolating screws, nuts and spacers	
Special function	Safety class		Class I(GB 7247.1-2012, human eye safety)	
	Laser spot emission angle		2.0(H)×8.0(V)mrad	
	Scanning frequency		10Hz/20Hz	
	Working condition		Resistant to sunlight, dirt, supports smoke penetration, non-rainfall conditions	
	Measurement data		Composite data (distance + RSSI)	
	Device self-test		Contents: Dirty/obstructed light transmission cover/high/low temperature	
	Model		AS-100C	

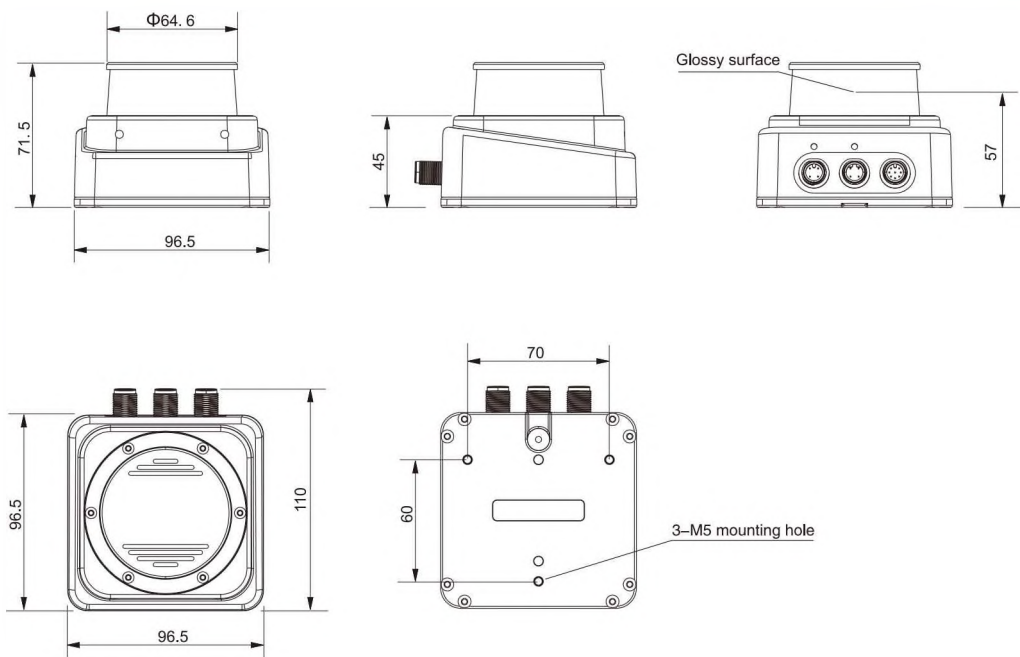

Power connector

	Socket	Types	Number of terminal
	Power supply	M12(Type A), Male	4
	Etherne	M12(Type B), Male	4
	I/O	M12(Type B), Male	8

Measuring coordinate system/scanning range/range

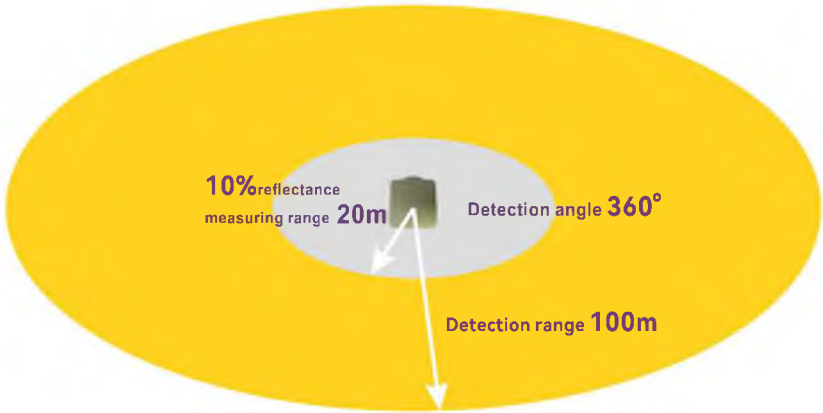

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: auh@nt-rt.ru || сайт: <https://akusense.nt-rt.ru>